


# Setting your sound to the EPSON Projector

Right Click on the Sound Icon on the task bar

Choose Playback Device

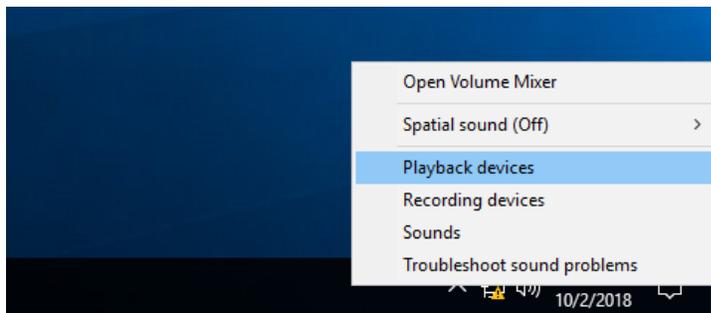

In this box you will see the Epson Projector, click on Epson to make default.

Green Check should now appear on Epson

Click ok

